

EPIC[®] WIDE ACTION VIDEO CAM

***Call Toll Free for Customer Service
877-269-8490***

Prepare your EPIC for action.

Register your EPIC
www.epicstealthcam.com

Go to www.epicstealthcam.com to register your new camera. By doing this you will be kept up to date of all the latest news as well as product updates. You will also be registered for monthly giveaways.

Another great feature of www.epicstealthcam.com is YouTube™ Action Upload. This super easy feature allows you to upload directly to YouTube™ through your existing YouTube™ account.

This user manual covers the following:

1. **Set Up**
2. **Operation**
3. **Download**
4. **Mounting**
5. **Warranty**

Any questions or need assistance setting up your EPIC. Call toll free: 877-269-8490.

 
1) Set up

Install batteries and memory card

Open the battery door located at the rear of the camera. Remove the security tag. Insert two AAA batteries (proper polarity +/-). Batteries designed for digital electronics are recommended. Close the battery door.

EPIC recommends Energizer Ultimate Lithium batteries for optimum performance.

Open rubber cover located at the rear of the camera. Install an SD memory card. 2GB or 4GB memory card size is recommended. Make sure memory card is firmly seated in the camera. Press the rubber cover back into place.

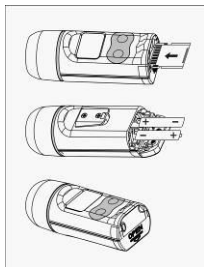

- ◆ Make sure camera is in the OFF position whenever adding or removing memory.
- ◆ If no SD card is inserted in the unit, the screen will show “NoSd” when you turn on the unit.
- ◆ SD cards must be clean (no images from other sources). If you are using the SD card from other cameras, please make sure to format the SD card in your computer using FAT formatting, not FAT32, prior to use in the camera. New cards are good to use straight from the package.
- ◆ **Helpful tip on batteries:** To extend your recording time we recommend using Lithium Batteries.

To save battery life, the camera will automatically shut down after 5 minutes of inactivity.

Low battery indication: When the batteries are low, the half battery icon will begin to flash continuously along with the beep sound for 60 seconds. This is a warning to replace the batteries with fresh ones or the unit will power down automatically.

To turn the EPIC on press the M button once.

To turn the EPIC off press and hold the M button.

NOTE: After the unit is turned off, you will need to wait 5 seconds before turning the EPIC back on.

Beep tone

Beep (on/off) setting allows the user the option of turning on or off the beep sound when pressing buttons.

Turn the EPIC on by pressing the **MODE (M)** button. Next press the **Mode (M)** and **SHUTTER (S)** button together.

Press the S button to select either tone on or tone off. Then press the M button to confirm the setting and return to AVI mode.



 
Note:

If beep tone is set to OFF, you will only hear the tones when entering beep tone setting, or when the battery is low.

Set Video Resolution / Still Resolution /Burst Mode / Zoom

Turn on camera. The default setting is for AVI video clips, and the screen should appear as shown here.

VIDEO can be recorded in either High or Low resolution. While in the video capture screen shown on the right, press and hold the **S** button until **ESC** appears on the LCD screen. Press **M** to enter resolution setting mode. **RES** will appear on the LCD screen. Press **S** to confirm this mode selection. Press **M** to scroll through the resolution choice. Three stars for High (VGA) or one star for Low (QVGA). Once you have selected the desired resolution, press **S** to confirm the resolution setting. Press **M** until the **ESC** screen appears, then press **S** to return back to the Video capture screen.




To start recording, press **S** and the EPIC will capture video until you press the **S** button again to stop the recording. During video recording the LCD screen will show recording length in seconds.



STILL PICTURES can be recorded in three different resolution settings. Turn on the camera. Press the **M** to enter still picture mode. The video icon will disappear in the top left of the LCD screen as shown here, press and hold the **S** button until **ESC** appears on the LCD screen. Press **M** to enter resolution setting mode. **RES** will appear on the LCD screen. Press **S** to confirm this mode selection. The still image mode has 3 resolution settings. Three stars for High Resolution / Two Stars for Mid-resolution / One star for Low resolution. Press **M** to scroll through the 3 resolution choices. Once you have selected the desired resolution, press **S** to confirm the resolution setting.



 To set the camera's Burst Mode (multiple exposures) setting, press **M** following the resolution setting above. The LCD screen will appear as shown on the right.



Press **S** to enter the Burst mode setting. Using the **M** button, select the number of images (1-9) for sequential action shots. Press **S** to save your setting.

Example of a 3 picture burst setting screen -



Press **M** to **ESC** then **S** to exit back to still image camera mode. If you are ready to start shooting pictures, simply press the **S** button and the camera will shoot images based on your programmed setting.

Zoom Setting

The EPIC also has the ability for 2X Zoom. To enter 2X mode, press the **M** button once from the Still Camera screen, or twice from the Video Screen until you see only the battery icon in the top right hand corner. Press the **S** button once until an icon resembling a magnifying glass is displayed above the battery icon. This indicates Zoom mode is activated. To return to standard wide-angle mode, press the **S** button again, and the magnifying glass will disappear from the screen. Press **M** three times to return to video capture screen, or four times to return to still image capture screen.

Deleting Images / Video

The EPIC allows you to delete video or images on the camera. From the main screen, press the mode button until **EONE** (**Erase One**) appears on the screen. Press **S** to delete the last image / video recorded in memory, or press **M** twice to return to camera mode.



Or, you can press **M** to enter **EALL (Erase All)**. Press and hold **S** to delete all images / video in memory. Once the LCD displays **0000**, the memory is clear and the camera will be ready for use in camera mode.

2) Operation

Once you have programmed the EPIC to your desired preferences, using the EPIC is quick and easy.

Video

Power on the camera by pressing the **M** button. Press the **S** button to start recording video. To stop recording, press **S** again.



Still Images

Power on the camera by pressing the **M** button. Press the **M** button once to enter still picture mode. The video icon will disappear in the top left of the LCD screen as shown on the right. Press **S** button to capture still image(s).



Video Mode

SD memory card

When memory card is full, LCD screen will display the word **FULL**. If you have the Beep tone set to on, you will hear short consecutive beeps for 30 seconds.



Camera Mode

3) Download

There are two simple ways to download your video or images to your personal computer.

USB cable

With the EPIC turned off, plug the USB cable into the camera's mini USB port located behind the rubber cover. Then plug the other end into your computer. Your computer should recognize the EPIC as a USB mass storage device. LCD screen on your EPIC will show the word **USB**.



Simply drag & drop the images or video to the desired destination file on your computer.

Note to MAC users: iPhoto will launch when the EPIC is plugged into a MAC. You may download the images and video to iPhoto.

Card Reader

Another option for download is to remove the SD card from the camera and insert into a USB card reader.

4) Mounting

The EPIC's ultra lightweight and compact size makes it ideal for all kinds of action. We have provided you with some basic mounts to help get you started. Depending on the kit you purchased, your EPIC may or may not include the following mounts.

All the EPIC mounting accessories utilize a quick clip device that allows the camera to be easily changed between mounting accessories.

Strap Mount – perfect for mounting to helmets with vents, wear on your wrist or just about anywhere you can think of, strap on the EPIC and catch all the action.

Waterproof Housing – while EPIC is splash resistant, the Waterproof case is a must for any extreme wet applications. This housing makes the EPIC completely waterproof down to 20 feet! Note: *You must remove the protective film on both side of the lens cover inside the waterproof housing prior to using under water.*

Clip Mount – easily clip to the brim of a hat or the visor of your Jeep®.

Bar Mount – whether it's the cross bars of your ATV, or the handle bars of your mountain bike, this tube mount will accommodate bars between ½" to 2" in diameter.

Tree Screw – while high in a tree stand or low in a blind, simply screw into any tree branch or trunk at the desired height to capture your line of view.

Shock resistant saddle – want a little extra padding or just don't want to use any of the provided mounting accessories? This dense foam pad used with a simple strap will help you mount the EPIC and absorb vibrations.

Curve mount – Permanent 3M™ VHB™ adhesive label adhere to the underside base of our universal quick clip. Ideal for helmet of any size or material finish.

Surface Preparation for Curve Mount:

- Use rubbing alcohol to clean the mounting surface.
- Wipe dry the surface.
- Remove adhesive protective label
- Apply your mount to surface.

- Press and hold for sixty (60) seconds to allow adhesive to bond to surface.
- Bond strength will increase through time. At room temperature, wait for at least 24 hours to achieve 90% bonding strength, and 72 hours for 100% bonding strength.

For more details, please visit 3M™ website, under 3M™ VHB™ tapes technical data section or follow this link: http://solutions.3m.com/wps/portal/3M/en_US/VHB/Tapes/Document-Center/Technical-Data/ and download PDF file: **Surface Preparation for 3M™ VHB™ Tape Applications**

Elbow Joint – With three (3) adjustable wheel hinges, you can capture almost any point of view angle without any obstruction.

Suction cup – Heavy duty RAM Suction Cup design offers a secure lock mount to contoured or flat surfaces such as moto helmets and fuel tanks.

To purchase additional mounts go to www.epicstealthcam.com or call toll free: **877-269-8490**

5) Warranty & Contact Information

Warranty

The EPIC is covered by a one year limited warranty on parts and labor from the date of original purchase and purchases must be made through an authorized dealer. The warranty covers defects in workmanship and materials. The warranty does not apply to units which have been damaged or abused intentionally or unintentionally. A purchase from individuals or unauthorized internet sites such as eBay voids the warranty.

Tampering with or altering unit will also void the warranty. Any unauthorized service will void the warranty. Original sales receipt must be produced for any warranty service, and a Return Authorization (RA) number must be obtained from customer service at 877-269-8490 prior to returning product.

Contact Info:

By email

info@epicstealthcam.com
www.epicstealthcam.com

By phone

Toll Free 877-269-8490

By mail

Stealth Cam, LLC
P.O. Box 539504
Grand Prairie, TX 75053-9504

US Patent D592, 231

Caution:

Modification not approved by the party responsible for compliance could void user's authority to operate the equipment

FCC Compliance

This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television receptions, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measure:

- ❖ Reorient or relocate the receiving antenna.
- ❖ Increase the separation between the equipment and the receiver.
- ❖ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ❖ Consult the dealer or an experienced radio/TV technician for help.

Product Specifications are subject to change. Stealth Cam is not responsible for any photographic or typographical errors. You Tube is a registered trademark of Google, Inc.