



**Call Toll Free for Customer Service
877-269-8490**

Prepare your EPIC for action.

Register your EPIC

V 1.0

05/08

Go to www.epicstealthcam.com to register your new camera. By doing this you will be kept up to date of all the latest news as well as product updates. You will also be registered for monthly giveaways.

Another great feature of www.epicstealthcam.com is YouTube™ Action Upload. This super easy feature allows you to upload directly to YouTube™ through your existing YouTube™ account.

This user manual covers the following:

- 1. Set Up**
- 2. Operation**
- 3. Download**
- 4. Mounting**
- 5. Technical Specs**
- 6. Warranty**

 
Any questions or need assistance setting up your EPIC. Call toll free: **877-269-8490**.

1) Set up

Install batteries and memory card

Open the battery door located at the rear of the camera. Remove the security tag. Insert two AAA batteries (proper polarity +/-). Batteries designed for digital electronics are recommended. Close the battery door.

Open rubber cover located at the rear of the camera. Install an SD memory card. Make sure memory card is firmly seated in the camera. Seal the rear of camera by replacing the rubber cover.

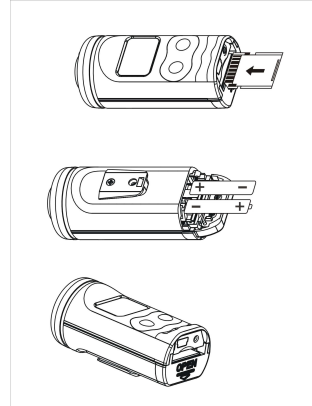

- ◆ ***Helpful tip on batteries:*** To extend your recording time we recommend using Lithium Batteries.

To save battery life, the camera will automatically shut down after 5 minutes of inactivity.

Choose the mounting device that best suits your activity. **Note: For extreme wet conditions or underwater, use the included water proof housing.**

To turn the EPIC on press the **M** button once.
To Turn the EPIC off press and hold the **M** button.

NOTE: After the unit is turned off, you will need to wait 5 seconds before turning the EPIC back on.

 
Set Beep tone & Time/Date

Turn the EPIC on by pressing the **MODE (M)** button. Next press the **Mode (M)** and **SHUTTER (S)** button together. The LCD screen will display the following:



Beep (on/off) Beep setting allows the user the option of turning on or off the beep sound when pressing buttons.

Press the **M** button once. Then press the **S** button to select either tone on or tone off.




Press the MODE button to save the setting.

Again, press the MODE and SHUTTER button together. The LCD screen will display the Date / Time setting (24 hour time format):



 Press the SHUTTER button to display the following month setting.
Press the **S** button to select the correct month.
Press **M** to enter day setting. Press **S** to select the correct day.
Press **M** to enter year setting. Press **S** to select the year.
Press **M** to enter hour setting. Press **S** to select the hour.
Press **M** to enter minute setting. Press **S** to select the minute.
Press **M** to return to key tone setting. Press **M** Twice to return to camera-ready mode.

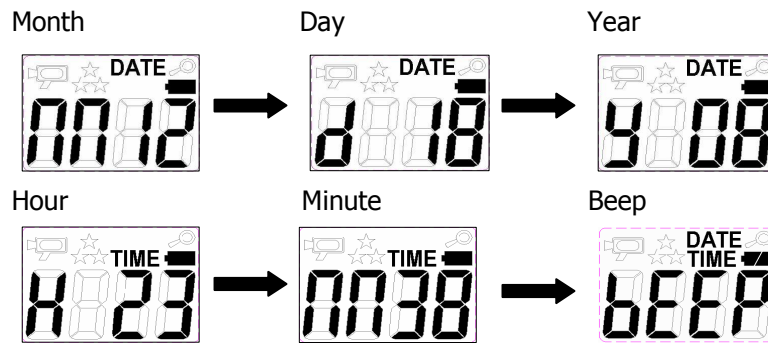


WARNING: Date and Time setting will reset to default setting when the battery is removed for replacement, or when you open the battery compartment for any reason. Repeat the date and time setting step in this section of the manual.

Set Video Resolution / Still Resolution /Burst Mode / Zoom

Turn on camera. The default setting is for still images, and the screen should appear as shown on the right.




 Press and hold the **S** button for 2 seconds until **ESC** appears on LCD screen as shown on the right.

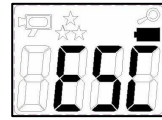

Press **M** to enter the RES (resolution) screen. Press **S** to select this setting mode. The still image mode has 3 resolution settings. Three stars for High Resolution / Two Stars for Mid-resolution / One star for Low resolution. Press **M** to scroll through the 3 resolution settings. Once you have selected the desired resolution, press **S** to confirm the setting.

 To set the camera's Burst Mode (multiple exposure) setting, press **M**. The LCD screen will appear as shown on the right.




Press **S** to enter the Burst setting. Using the **M** button, select the number of images (1-9) for sequential action shots. Press **S** to save your setting.



- Example of a 3 picture burst setting screen.

Press **M** to **ESC** then **S** to exit back to still image camera mode. If you are ready to start shooting pictures, simply press the **S** button and the camera will shoot images based on your programmed setting.

 VIDEO can be recorded in either High or Low resolution. While in the video capture screen shown on the right, press and hold the **S** button until **ESC** appears on the LCD screen. Press **M** until **RES** appears. Press **S** to select the **RES** (resolution) setting. Press **M** to set the resolution. Three stars for High (VGA) or one star for Low (QVGA). Press **S** to confirm the setting.

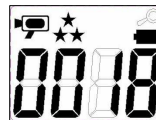

Press **M** until the **ESC** screen appears, then press **S** to escape back to the Video capture screen.

 
To start recording, press **S** and the EPIC will capture video until you press the **S** button again to stop the recording. During video recording the LCD screen will show recording length in seconds.

Zoom Setting


The EPIC also has the ability for 2X Zoom. To enter 2X mode, press the **M** button twice from the Still Camera screen, or once from the Video Screen until you see only the battery icon in the top right hand corner. Press the **S** button once until an icon resembling a magnifying glass is displayed above the battery icon. This indicates Zoom mode is activated. To return to standard wide-angle mode, press the **S** button again, and the magnifying glass will disappear from the screen. Press **M** three times to return to still image screen, or four times to return to video capture.

Deleting Images / Video

The **EPIC** allows you to delete video or images on the camera. From the main screen, press the mode button until **EONE (Erase One)** appears on the screen. Press **S** to delete the last image / video recorded in memory, or press **M** twice to return to camera mode.

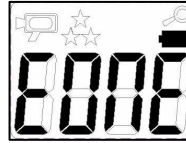

 Or, you can press **M** to enter **EALL (Erase All)**. Press and hold **S** to delete all images / video in memory. Once the LCD displays **0000**, the memory is clear and the camera will be ready for use in camera mode.

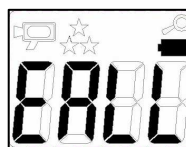

2) Operation

Once you have programmed the EPIC to your desired preferences, using the EPIC is quick and easy.

Still Images.

Power on the camera by pressing the M button. Press the S button to start shooting still pictures.



Camera mode

Video

Power on the camera by pressing the M button. Press the M button once to enter Video mode. A small video camera icon should appear in the top left of the LCD screen as shown on the right.



Video mode

Press the S button to start recording video. To stop recording, press S again.

3) Download

There are two simple ways to download your video or images to your personal computer.

USB cable

With the EPIC turned off, plug the USB cable into the camera's mini USB port located behind the rubber cover. Then plug the other end into your computer. Your computer should recognize the EPIC as a USB mass storage device. LCD screen on your EPIC will show the word **USB**.

Simply drag & drop the images or video to the desired destination file on your computer.



Note to MAC users: iPhoto will launch when the EPIC is plugged into a MAC. You may download the images and video to iPhoto.

Card Reader

Another option for download is to remove the SD card from the camera and insert into a USB card reader.

4) Mounting

The EPIC's ultra lightweight and compact size makes it ideal for all kinds of action. We have provided you with some basic mounts to help get you started. Depending on the kit you purchased, your EPIC may come with one or more of the following mounts. What you do with them will be unique to your activity and desired footage. Have a great mounting idea? – share it with fellow EPIC users. If we post your idea, you will be eligible to win valuable prizes. Just go to www.epicstealthcam.com/mountingideas

All the EPIC mounting accessories utilize a quick clip device that allows the camera to be easily changed between mounting accessories.

Strap Mount – perfect for mounting to helmets, wear on your wrist or just about anywhere you can think of, strap on the EPIC and catch all the action.

Waterproof Housing – while EPIC is splash resistant, the included Waterproof case is a must for any extreme wet applications. This housing makes the EPIC completely waterproof down to 20 feet! You must remove the protective film on both side of the lens cover inside the waterproof housing prior to using under water.

Clip Mount – easily clip to the brim of a hat or the visor of your Jeep®.

Bar Mount – whether it's the cross bars of your ATV, or the handle bars of your mountain bike, this tube mount will accommodate bars between ½" to 2" in diameter.

Tree Screw – while high in a tree stand or low in a blind, simply screw into any tree branch or trunk at the desired height to capture your line of view.

Shock resistant saddle – Want a little extra padding or just don't want to use any of the provided mounting accessories? This dense foam pad used with a simple strap will help you mount the EPIC and absorb vibrations.

To purchase additional mounts go to www.epicstealthcam.com
or call toll free: 877-269-8490

5) Technical Specifications

Camera Lens	5P Glass with IR Coating, 47° View
Camera Aperture	2.8mm
Image Sensor	1/3" 2M Color CMOS Video
Focus	Fixed or 1 Meter to Infinity
AVI Resolution	30 Frames Per Second VGA: 640 x 480 QVGA: 320 x 240
Still Image Resolution	5 Mega pixels (Hi), 3 Mega pixels (Lo), VGA (Base)
Supported Formats	Video: AVI Photos: JPG
Default Setting	Still Image: 5M (Hi) AVI: VGA Burst Mode: 1P Zoom mode: Off Beep tone: On Date/time: 2007/01/01 00:00

6) Warranty & Contact Information

Warranty

The EPIC is covered by a 90 day limited warranty on parts and labor from the date of original purchase and purchases must be made through an authorized dealer. The warranty covers defects in workmanship and materials. The warranty does not apply to units which have been damaged or abused intentionally or unintentionally. A purchase from individuals or unauthorized internet sales voids the warranty.

Tampering with or altering unit will also void the warranty. Any unauthorized service will void the warranty. Original sales receipt must be produced for any warranty service, and a Return Authorization (RA) number must be obtained from customer service at 877-269-8490 prior to returning product.

Contact

By email

info@epicstealthcam.com

www.epicstealthcam.com

By phone

Toll Free 877-269-8490

By mail

Stealth Cam, LLC

P.O. Box 539504

Grand Prairie, TX 75053-9504

US Patent Pending

Product Specifications are subject to change. Stealth Cam is not responsible for any photographic or typographical errors. You Tube is a registered trademark of Google, Inc.